

# Rack Safety Plus, 3 U, 230/400 V AC

# Power Distribution Unit with Emergency Stop

# **User Manual**

Release 1.0 08.12.2021



Doc-No: 63972-416



Schroff GmbH Langenalber Str. 96-100 75334 Straubenhardt/Germany schroff.nVent.com

This document is furnished under license and may be used or copied only in accordance with the terms of such license. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by nVent. nVent assumes no responsibility or liability for any errors or inaccuracies that may appear in this document.

Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, manual, recording, or otherwise, without the prior written permission of nVent.

All nVent marks and logos are owned or licensed by nVent Services GmbH or its affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without notice.

Copyright © 2021 nVent
All Rights Reserved.



### **Table of Contents**

1 S	afety	5
1.1	Intended Use	5
1.2	Safety instructions of the manufacturer	5
1.2.1	1 Disclaimer	5
1.3	Safety symbols used in this manual	6
1.4	Safety Information for the Operator	7
1.5	Safety assessment	7
2 P	ower Distribution Unit Overview	8
2.1	System description	8
2.2	Front and Rear View	9
2.3	Example Configurations	10
2.4	Mains inlets	13
2.5	AC Outlets	14
2.6	DC Outlet (Option)	15
2.7	RDC and Circuit Breakers	15
2.8	Surge Arrester (Option)	16
2.9	Inrush Current Limiter (Option)	17
3 E	mergency Stop System	18
3.1	Emergency Stop safety features	18
3.2	Emergency Stop Input and Output	19
3.2.1	1 Emergency Stop Status LEDs	19
4 In	nstallation and Commissioning	20
4.1	Installation	20
4.2	Mains connection and system start-up	21
5 M	laintenance	22
6 D	visposal	22
7 Te	echnical data	23
	Dimensions	24

Date: 2021/12/10



Date: 2021/12/10 Page: 4 of 24



### 1 Safety

#### 1.1 Intended Use

The nVent SCHROFF power distribution unit described in this manual is a power distribution unit used to supply AC mains power to electrical or electronic devices as a central power switch with emergency stop function.

Intended use includes compliance with the terms and conditions for assembly, disassembly, commissioning, operation and maintenance specified by the manufacturer.

The power distribution unit is only intended for use in dry locations, i.e. indoors and without any pollution, in an industrial environment or for commercial use.

### 1.2 Safety instructions of the manufacturer

#### 1.2.1 Disclaimer

Schroff accepts no liability for any errors in this documentation. To the maximum extent permissible by law, any liability for damage, direct or indirect, arising from the supply or use of this documentation is excluded.

Schroff retains the right to modify this document, including the liability disclaimer, at any time without notice and accepts no liability for any consequences of such alterations.

Date: 2021/12/10 Page: 5 of 24



### 1.3 Safety symbols used in this manual

In these original operating instructions, warning notices point out residual risks that cannot be avoided by constructive means when installing or operating the Power Distribution Unit. The warning notices are classified according to the severity of the damage occurring and the probability of its occurrence.

<b>⚠ DANGER</b>		
	Short description of the danger	
Symbol	The signal word DANGER indicates an immediate danger.	
	Non-observance will result in severe injuries or death.	

<b>⚠ WARNING</b>		
	Short description of the danger	
Symbol	The signal word WARNING indicates a possible danger.	
	Non-observance can lead to serious injury or death.	

<b>⚠ CAUTION</b>		
	Short description of the danger	
Symbol	The signal word CAUTION indicates a possible danger.	
	Non-observance can lead to injuries.	

### **ATTENTION**

### **Short description**

The signal word ATTENTION indicates possible damages to equipment.

Non-observance can lead to damage to the device.



Important information

Date: 2021/12/10 Page: 6 of 24



### 1.4 Safety Information for the Operator

Only trained specialists are authorized to carry out assembly, commissioning, completion, maintenance and service of the power distribution unit. The nationally applicable health and safety regulations must also be adhered to.

### **↑ WARNING**

Risk of injury due to insufficient personal protective equipment



If you use the wrong protective equipment or no protective equipment at all, you could be seriously injured.

- Wear protective equipment adapted to the work processes.
- Check the protective equipment before each use to ensure that it is intact!
- Use only approved protective equipment.

### 1.5 Safety assessment

Before using the power distribution unit in conjunction with a plant/machine, a safety assessment in accordance with the Machinery Directive is required. The product as an individual component fulfils the functional safety requirements in accordance with EN ISO 13849-1 Category 3 and EN 62061. However, this does not guarantee the functional safety of the overall plant/machine. To achieve the relevant safety level of the overall plant/machine's required safety functions, each safety function needs to be considered separately.

Date: 2021/12/10 Page: 7 of 24



### 2 Power Distribution Unit Overview

### 2.1 System description

The power distribution unit is intended to supply AC mains power and 24 V DC power to electrical or electronic devices as a central power switch with emergency stop function.

The power distribution unit has a modular design and can be configured by the customer.



Due to the modularity not all possible configurations can be described in this manual.

For further technical information and configuration options, please refer to the relevant data sheets and the online configurator at schroff.nvent.com.

#### **Default features**

- 19" 3 U aluminium subrack
- Main switch
- Mains fuses
- Circuit breaker panel
- Emergency stop system
- Status LEDs for phase presence and emergency stop
- ON/OFF switch for switched outputs

#### Possible configuration options:

Mains input

400 V 3-phase or 230 V 1-phase with different connector types such as IEC 60309, IEC 60320-C20, Harting Han 3A/Q5 or cable

AC outputs

2 rear panels with different connector types such as IEC 60320-C13, IEC 60320-C19 or CEE 7/3 Type F (Schuko).

DC Power supply

24 V DC power supply with rear output panel

• Permanent AC Service Outputs

IEC 60320-C13 or CEE 7/3 Type F (Schuko) at the front and rear panel

- RCD circuit breaker
- Transparent cover for the circuit breakers
- Surge Arrester
- Inrush Current Limiter
- AC input with EMC filter

All outputs are protected by circuit breakers.


All outputs except the "Service" outputs can be switched off by the Emergency Stop system.

Date: 2021/12/10 Page: 8 of 24



### 2.2 Front and Rear View

### (P/N 21270-001)

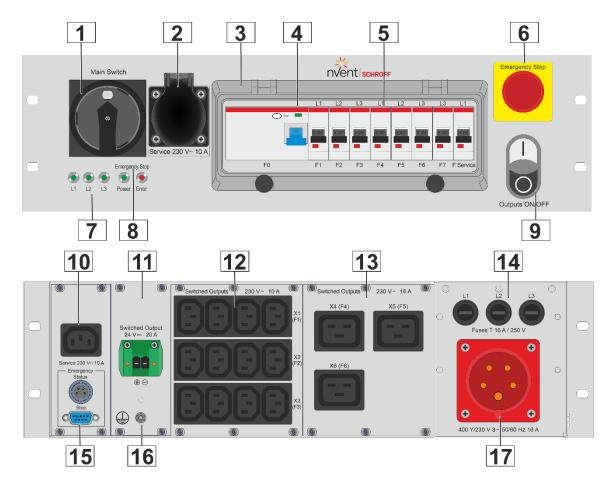

1	Main Switch	10	"Service" Output 230 V AC 10 A (option)
2	Service Output 230 V AC 10 A (option)	11	24 V DC Output, switched (option)
3	Transparent Cover for Circuit Breakers	12	Configurable output panel 1
	(option)		Example: Switched Power Outputs IEC-60320
			C13, 230 V AC 10 A
4	RCD (option)	13	Configurable output panel 2
			Example: Switched Power Outputs IEC-60320
			C19, 230 V AC 16 A
5	Circuit Breakers	14	Mains Fuses T16 A 250 V
6	Emergency Stop Push Button	15	Emergency Stop Input and Status Output
7	Phase Monitor LEDs	16	Ground Stud
8	Emergency Stop Status LEDs	17	Configurable input panel
			Example: IEC 60309 3L+N+PE, 6h, 400 Y/230
			V 3~ 50/60 Hz 16 A
9	ON/OFF Switch for switched Outputs		

Date: 2021/12/10 Page: 9 of 24



### 2.3 Example Configurations

PN: 21270-001





Date: 2021/12/10 Page: 10 of 24



PN: 21700-003





Date: 2021/12/10 Page: 11 of 24



PN: 21700-005





Date: 2021/12/10 Page: 12 of 24



#### 2.4 Mains inlets

Different power inlet modules for 400 V AC and 230 V AC are available for the Power Distribution Unit.

The following overview represents the availability at the time of publication of this manual. For the current availability visit schroff.nvent.com

### 400 V AC Inputs







Cable (2 m)

Harting Han 3A with Han Q 5/0

IEC 60309 3L+N+PE, 6h

### 230 V AC Inputs



Cable (2 m)



Harting Han 3A with Han Q 5/0



IEC 60309 L+N+PE, 6h



IEC 60320-C20

Date: 2021/12/10 Page: 13 of 24




#### 2.5 **AC Outlets**


Different power outlet modules for 230 V AC 10 A and 16 A are available.


The following overview represents the availability at the time of publication of this manual.

For the current availability visit schroff.nvent.com

### **Switched 230 V AC Outlets**

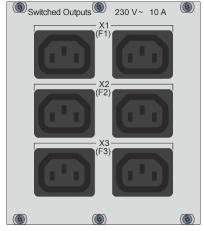

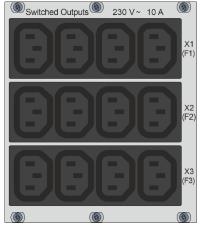


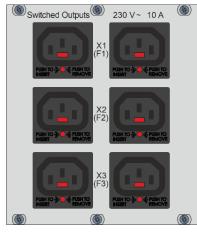



IEC 60320-C13

IEC 60320-C13

IEC 60320-C13 locking outlets

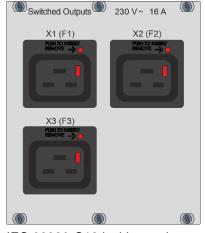

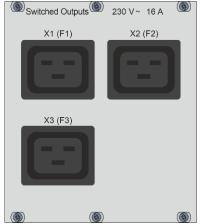

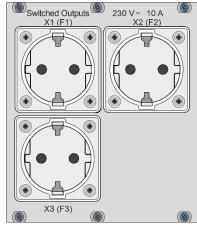

IEC 60320-C19 locking outlets

IEC 60320-C19

CEE 7/3 Type F (Schuko)

### Permanent 230 V AC Service Outlets





Œ Service 230 V~ 10 A Front





CEE 7/3 Type F (Schuko)

IEC 60320-C13)

IEC 60320-C13

CEE 7/3 Type F (Schuko)

Date: 2021/12/10 Page: 14 of 24



### 2.6 DC Outlet (Option)

The Power Distribution Unit can be equipped with a switched 24 V, 20 A DC Outlet.

 
The connector is Phoenix Contact

P/N: 1840557

The mating connector is Phoenix Contact

P/N: 1828249

The DC PSU is connected to Phase L1.




#### 2.7 RDC and Circuit Breakers

The outputs are protected by circuit breakers (5). The number of the circuit breaker corresponds to the number of the output, for example, X1 is connected to F1, X2 is connected to F2 and so on.

The total current consumption of all outputs must not exceed 16 A per phase.

An RDC (4) and a transparent cover (3) for circuit breaker and RDC are available as options.

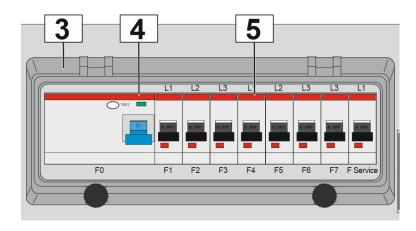


Date: 2021/12/10 Page: 15 of 24



### 2.8 Surge Arrester (Option)

 
The Power
Distribution Unit can
be equipped with a
surge arrester.







3 phase

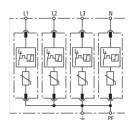

1 phase

Technical Data Surge Arrester	
SPD according to EN 61643-11 / IEC 61643-11	type 2 / class II
Energy coordination with terminal equipment (≤ 10 m)	type 2 + type 3
Nominal voltage (a.c.) (U <sub>N</sub> )	230 / 400 V (50 / 60 Hz)
Max. continuous operating voltage (a.c.) (U <sub>c</sub> )	275 V (50 / 60 Hz)
Nominal discharge current (8/20 µs) (In)	20 kA
Max. discharge current (8/20 μs) (I <sub>max</sub> )	40 kA
Voltage protection level [L-PE]/[N-PE] (U <sub>P</sub> )	≤ 1.5 / ≤ 1.5 kV
Voltage protection level [L-PE] / [N-PE] at 5 kA (U <sub>P</sub> )	≤ 1 / ≤ 1 kV
Response time (t <sub>A</sub> )	≤ 25 ns
Max. mains-side overcurrent protection	125 A gG
Short-circuit withstand capability for max. mains-side overcurrent protection ( $I_{\text{SCCR}}$ )	50 kA <sub>rms</sub>
Temporary overvoltage (TOV) (U <sub>T</sub> ) – Characteristic	335 V / 5 sec. – withstand
Temporary overvoltage (TOV) (U <sub>T</sub> ) − Characteristic	440 V / 120 min. – safe failure

Date: 2021/12/10 Page: 16 of 24



### 2.9 Inrush Current Limiter (Option)

The Power Distribution Unit provides an inrush current limiter for each phase as an option. The inrush current limiter is designed for capacitive loads. In the moment of switching-on the system the inrush current of the connected load will be limited for the defined time Ton. Independent from the previous inrush level; the current limiting is always strict. After Ton elapses the current limiting circuit of the inrush current limiter will be bypassed. Then the load is directly connected to the AC. If an AC dump overshoots the defined time Toff, it will be detected by the inrush current limiter. As soon as the AC recovers the inrush will be limited, again. The inrush current limiter provides an internal temperature control. In case of a failure the device shuts down to safely prevent from overheating or fire.

Technical Data	
Peak Current Limiting ±6%	48 A
R.M.S Current Limiting ±6%	33,9 A
Maximum Allowed Capacitive Load	6.000 uF
Limiting Time (Ton Power On)	300 ms (±50 ms)
Release Time (Toff Low Voltage)	550 ms (±50 ms)
Limiting Interval [Tinterval for ACcont.)	≥ 900 ms

Date: 2021/12/10 Page: 17 of 24




### 3 Emergency Stop System

The device is equipped with an emergency stop button (6).

Pressing the emergency stop button disconnects the switched AC and DC outputs from the mains. The button is mechanically latching. Emergency stop is deactivated by pulling the button.

The switched AC and DC outputs can be turned on again by pressing the Outputs ON/OFF switch.

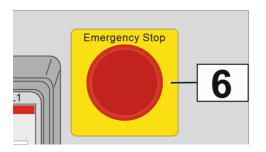

### **A DANGER**



### Danger of electric shock

The "Service" AC outputs are **not** switched off via the Emergency Stop System.

### 3.1 Emergency Stop safety features

The Emergency Stop function of the nVent SCHROFF power distribution unit is controlled and monitored by a "PILZ" safety relay.

The safety relay provides a safety-related interruption of the switched outputs. The safety relay meets the requirements of EN 60947-5-1 and EN 60204-1 in applications with E-STOP push buttons.

The emergency stop push button is vandalism-proof. If the emergency stop is sheared off during operation, the emergency stop function is also triggered.

The safety relay meets the following safety requirements:

- The circuit is redundant with built-in self-monitoring.
- The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.
- Two emergency stop input circuits with cross-circuit detection.
- Emergency stop function is triggered when either one of the two emergency stop input circuits is interrupted or a cross-circuit between the circuits is detected.



The safety relay drives two power contactors responsible for switching the outputs.

The power contractors are monitored by auxilliary contacts within a feedback loop of the safety relay. In case of one power contactor failing by a stuck contact the system can not be turned on again.

The red ERROR LED on front panel signals if one of the power contactors got stuck

Date: 2021/12/10 Page: 18 of 24



### 3.2 Emergency Stop Input and Output

An additional emergency stop push button can be connected to the system at the "Emergency Stop" input (14).

If no additional emergency stop switch is connected, the socket must be terminated with a jumper plug. (Scope of delivery)

The "Emergency Status" connector can be used to transfer status signals to other devices. The Emergency Status plug connector a relay output of the status of the safety relay. If the AC and DC outputs are enabled, the relay output (pin 1+2) is closed. If the emergency stop function is triggered, the safety relay interrupts the relay contact.


If the outputs are not enabled via the Output ON/OFF switch, the relay output is permanently open.

Emergency Stop (DSUB9)

Pin 1&2 Emergency stop input circuit 1
Pin 6&7 Emergency stop input circuit 2

Emergency Status (Lumberg KFV 40)

Pin 1&2 Relay output status safety relay

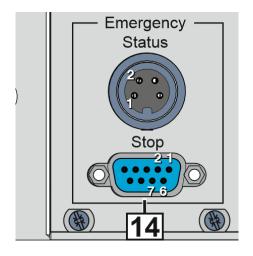

### 3.2.1 Emergency Stop Status LEDs

The emergency stop system is powered by a dedicated power supply. The presence of the supply voltage for the emergency stop system is signaled by the green "Power" LED.

The red "Error" LED signals if one of the power contactors got stuck



Date: 2021/12/10 Page: 19 of 24



### 4 Installation and Commissioning

### **↑** WARNING



### Risk of injury and accidents due to insufficiently qualified personnel!

 The installation may only be carried out by qualified personnel who are authorized to do so according to the valid safety regulations, e.g. by authorized specialized companies or authorized departments of the company.

### **⚠ WARNING**

### Power cable rating



If the system was not supplied with AC power cables, purchase AC power cables approved for use in your country. The AC power cables must be rated for the product and for the voltage and current marked on the product's electrical ratings label. The voltage and current rating of the cable should be greater than the ratings marked on the product.

### **↑** WARNING



### Protective earth/GND connection

The power distribution unit must be operated with protective earth/GND connection. Use only a three conductor AC power cable with a protective earth conductor that meets the IEC safety standards!

### **ATTENTION**

Incorrect mains voltage or overload can lead to component damage!

The device has a 400 V 3-phase or a 230 V 1-phase power input. The total current consumption of all outputs must not exceed 16 A per phase.

#### 4.1 Installation

### **⚠ DANGER**



#### Danger of electric shock

The EMERGENCY STOP button must be easy to access and not be blocked by any objects.

The device is designed to be installed indoors in dry environment without pollution, in 19" rack systems with access to the front panel and rear panel.


Date: 2021/12/10 Page: 20 of 24



### 4.2 Mains connection and system start-up

Connect the system to the 400 Y/230 V  $3\sim$  or the 230 V $\sim$  mains input.

**Note:** Input and connector type depends on the configuration

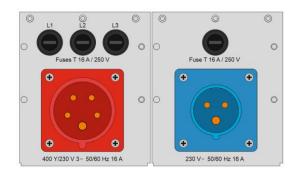


Switch the system on via the main switch (1). The AC "Service" outputs will be switched on.


Turn on the switched AC outputs (12,13) and DC output (11) with the Outputs ON/OFF switch (9).

(The picture below shows a possible configuration)

The presence of all phases is indicated via the LEDs (7).

The red Error LED on front panel signals if one of the power contactors sticks.

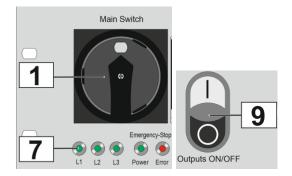

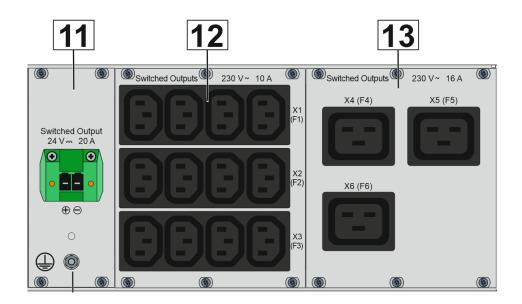

Date: 2021/12/10 Page: 21 of 24



#### 5 Maintenance

The device is maintenance-free. Depending on the operating conditions, the emergency stop function should be tested regularly at intervals specified by the operator.



Depending on the operational environment, measures to detect the nonopening of switching elements may be required under some circumstances. When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly.

To check the relay outputs, switch off and start the device again, so that the internal diagnostics of the "PILZ" module can check that the safety contacts open correctly.

for SIL CL 3/PL e at least 1x per month for SIL CL 2/PL d at least 1x per year

### 6 Disposal



The devices described in this manual must be recycled. In accordance with the Directive 2012/19/EC on waste electronic and electrical equipment (WEEE), they may not be disposed of in the municipal waste disposal services. To ensure environmentally friendly recycling the devices can be returned to a locally

approved disposal center. Make sure that you observe the regulations applicable in your country.

Date: 2021/12/10 Page: 22 of 24




### 7 Technical data


Туре	Power Distribution Unit
Part No.	21270-0xx
Electrical data	
Supply voltage, single phase	230 V AC, 50/60 Hz 16 A
Supply voltage, 3 phase	400 Y/230 V 3~ 50/60 Hz 16 A
Protection fuses	16 AT H
Environment	
Ambient temperature operation	540 °C
Ambient temperature transport/storage	-2565 °C
Maximum operational altitude	2000 meters
Max. relative humidity level	85 %, non condensing
Weight	Up to 19 kg
Safety	
Protection class	1
Safety	DIN EN 61010-1
Dimensions	
Height	3 U / 132,5 mm
Width	19" / 483 mm
Depth	547,11 mm

Date: 2021/12/10 Page: 23 of 24



### 7.1 Dimensions

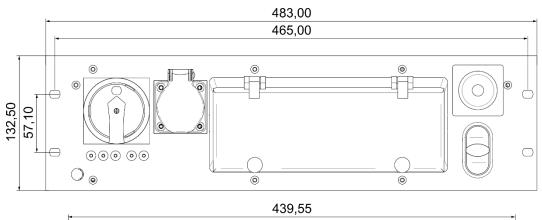

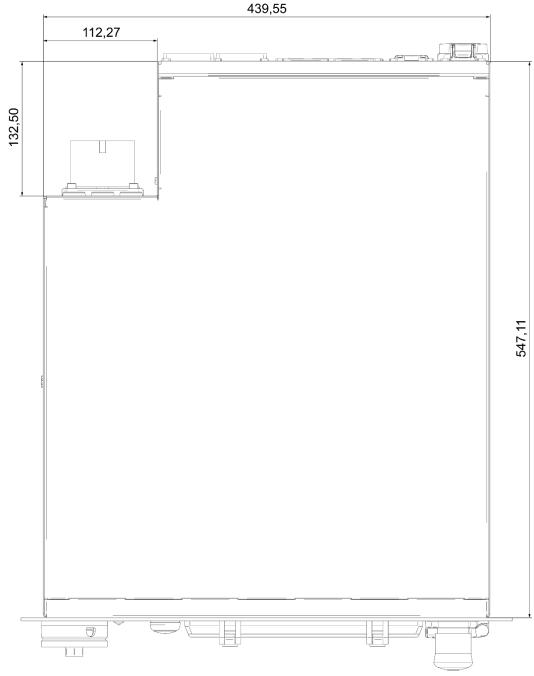

Date: 2021/12/10 Page: 24 of 24